




STEP UP
הצעד הראשון לעיצוב הבית


CT5238TREV

CT5238WHITE




CT5238STONE

CT5238WALNUT




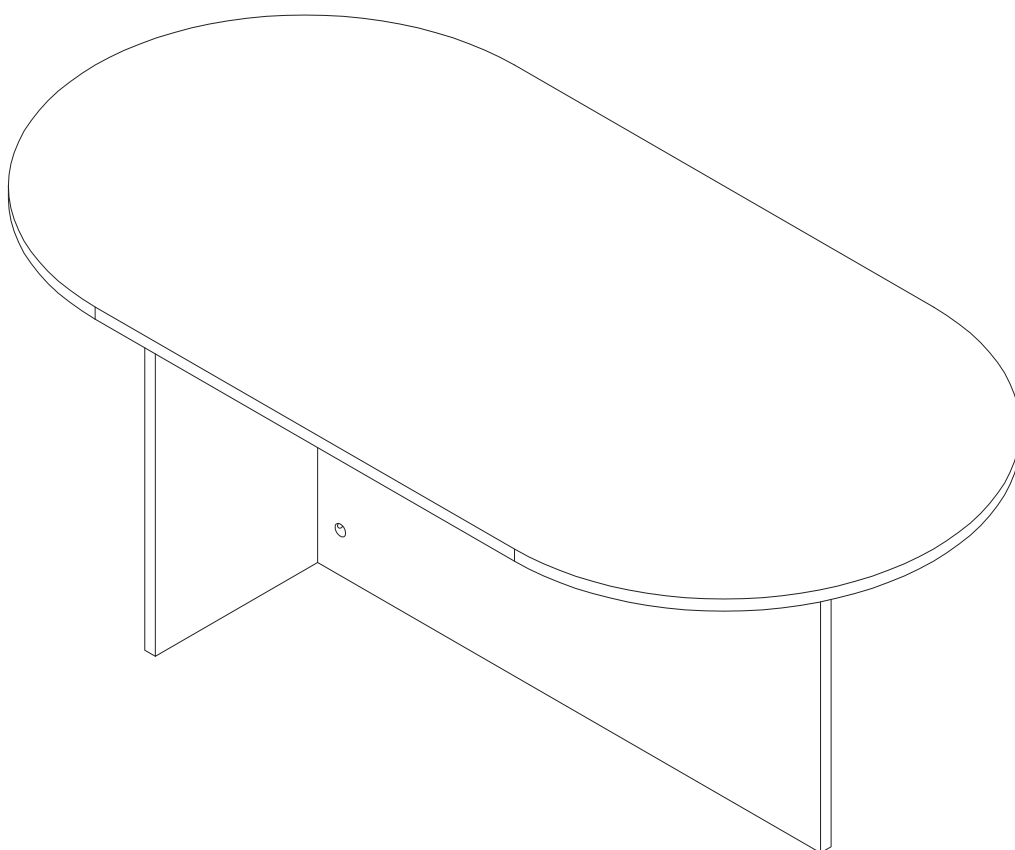


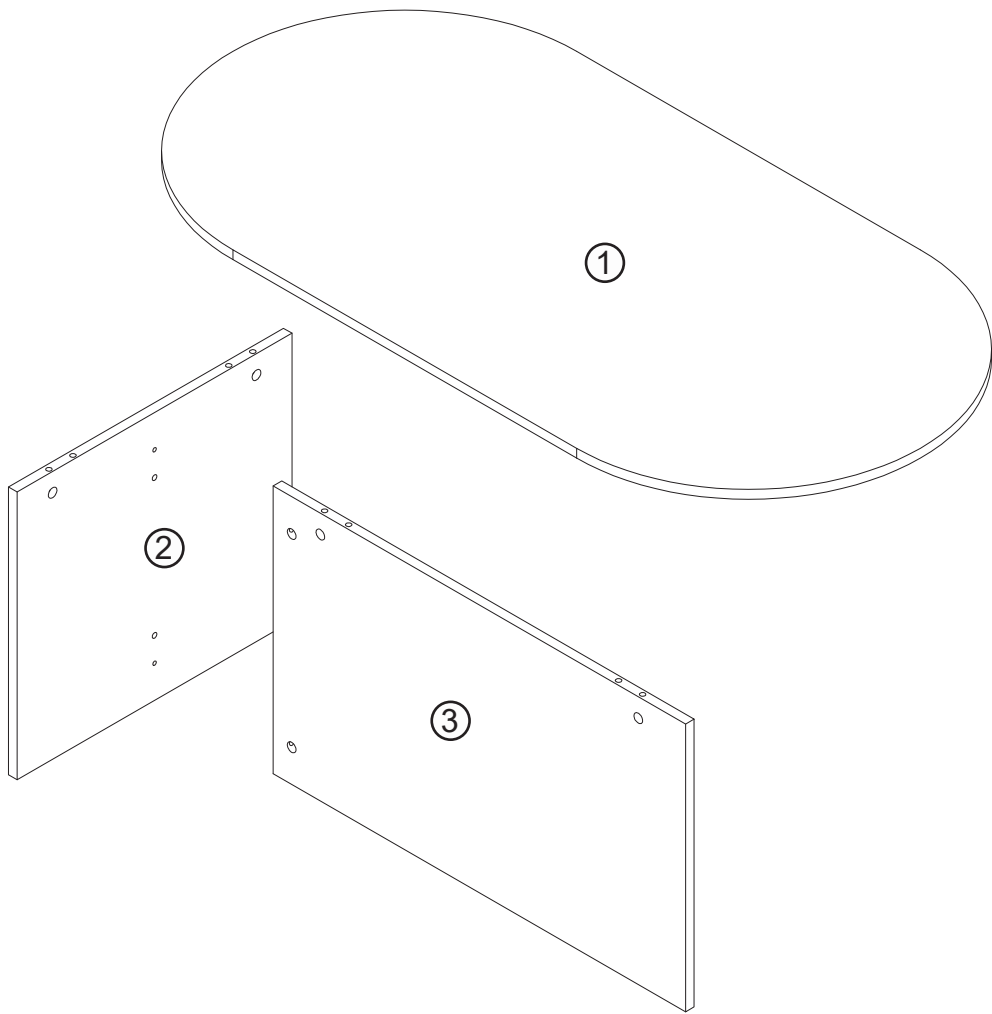


Parts List

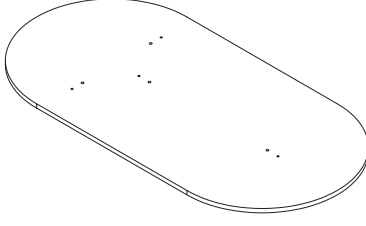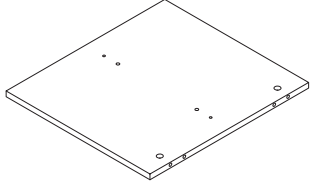
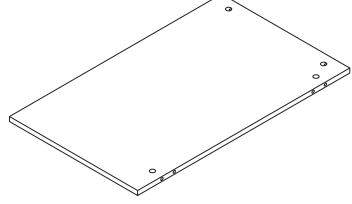
①  x1	②  x1	③  x1	
---	--	---	--

Hardware List


A  M6x35 x6	B  Ø15x10 x6	C  Ø6x30 x6	D  x3
--	---	---	---

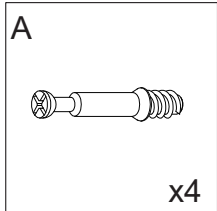


Step 1

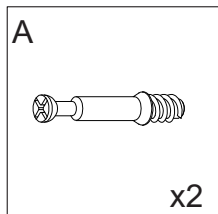
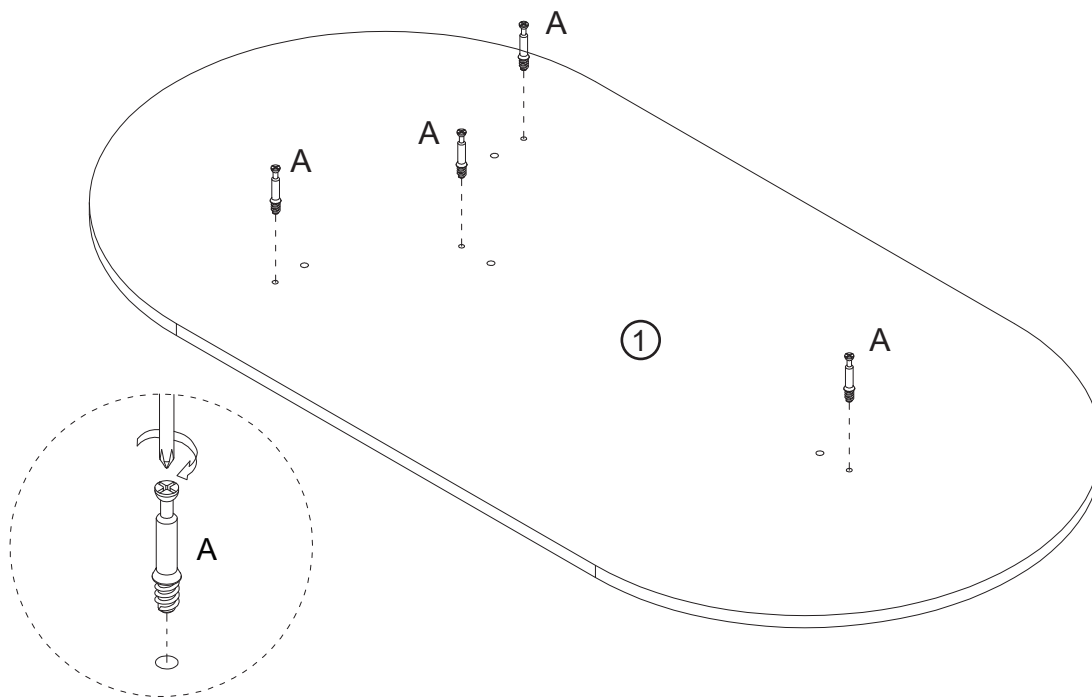


Step 2

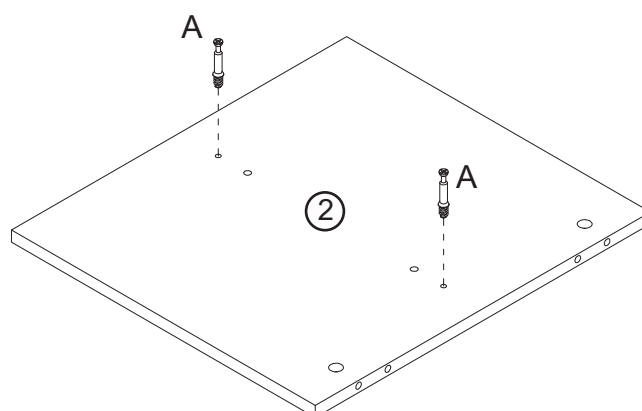


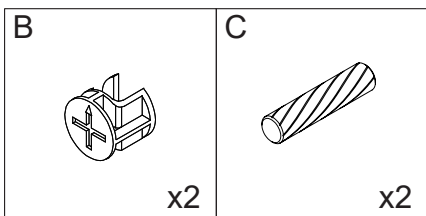


Step 3

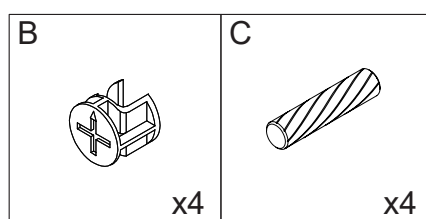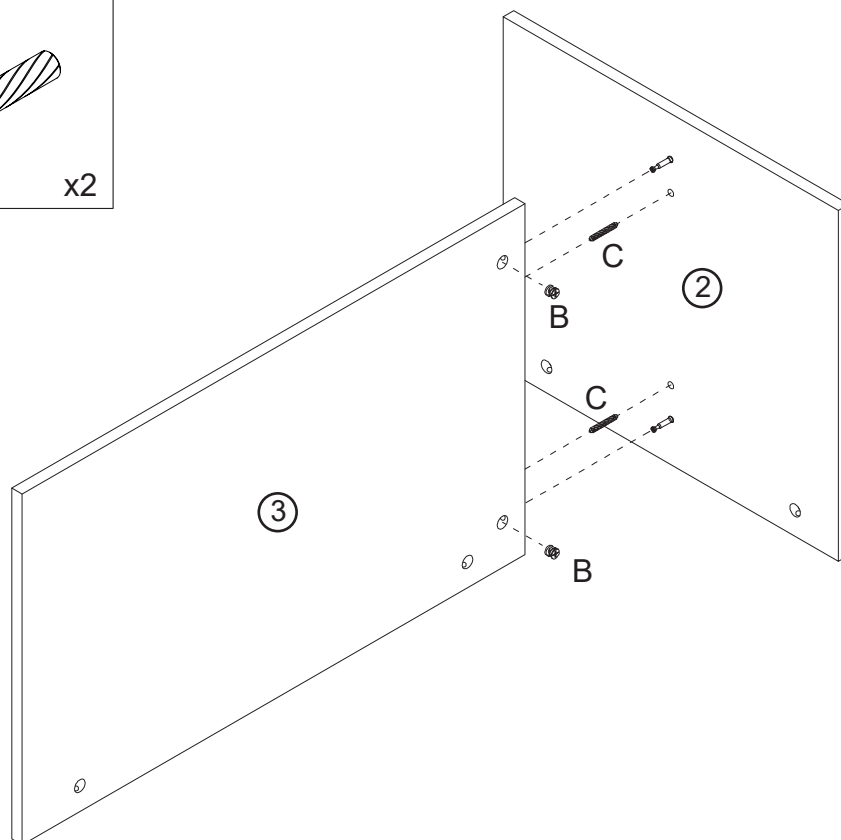


Step 4

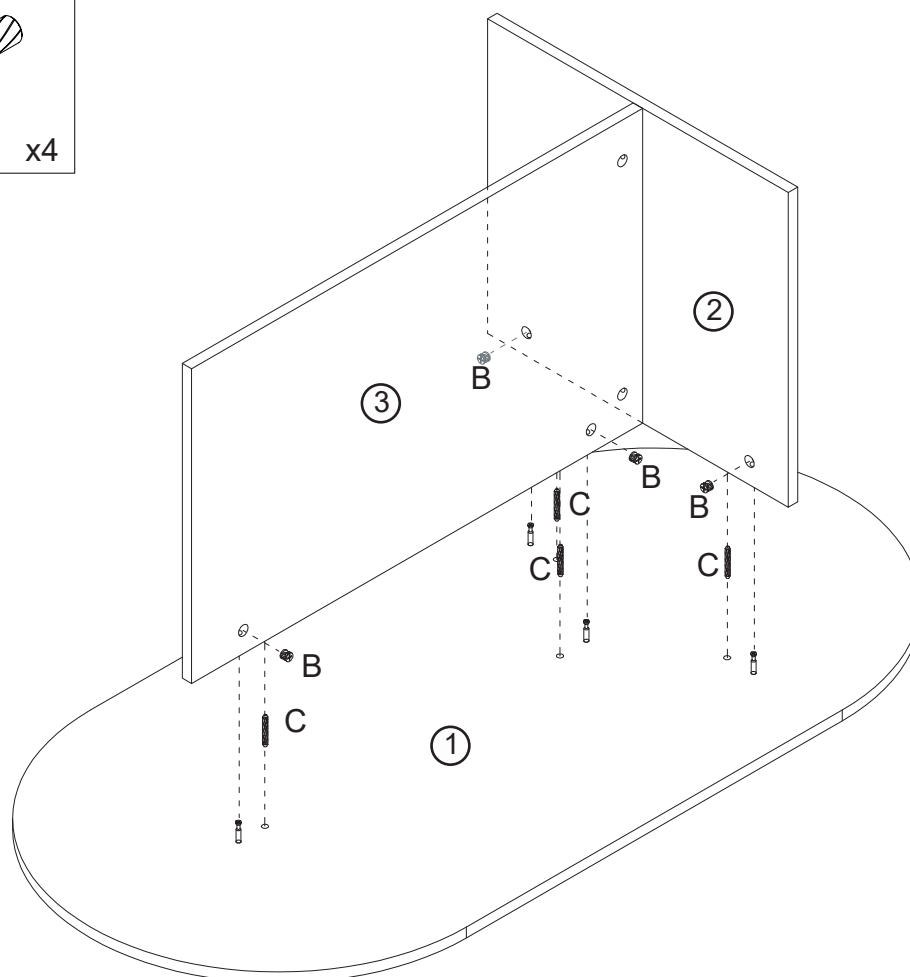

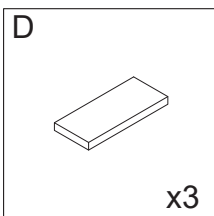

Step 5

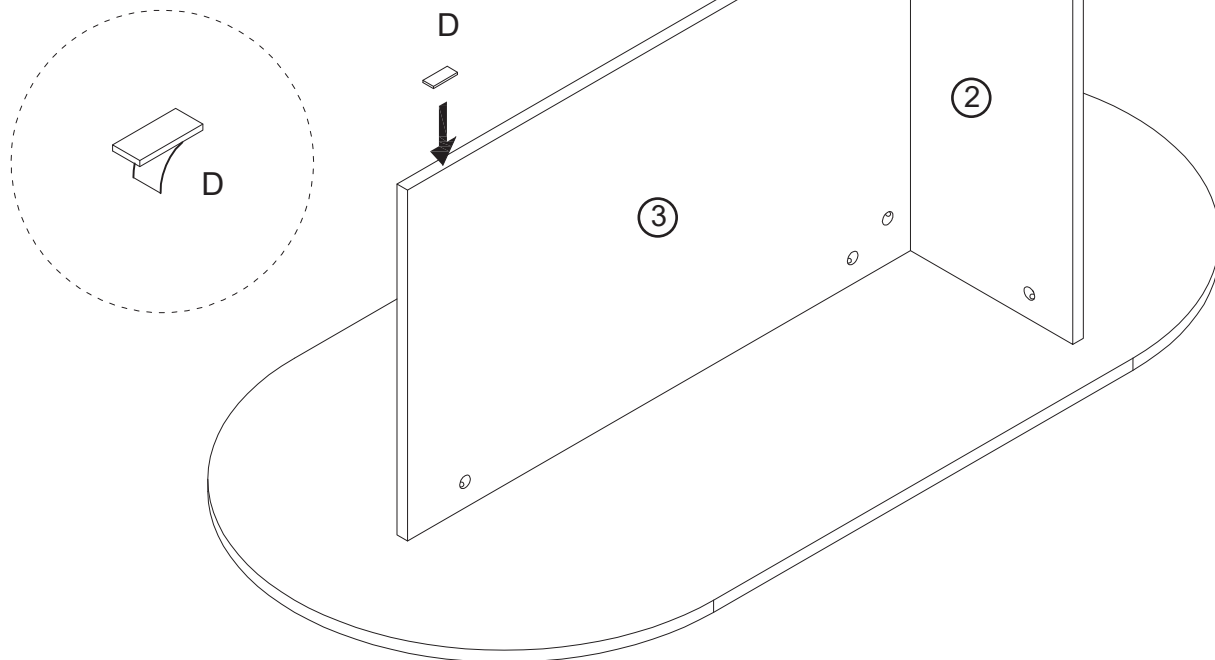

Step 6

