




1 piece of
Left Bracket
A




1 piece of
Right Bracket
B




1 piece of
Upper Door C




1 piece of
Small Door D

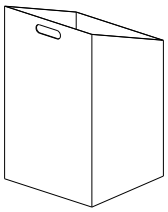


1 piece of
Cloth Bag E

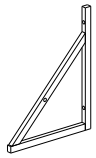


2 pieces
of Tripod F

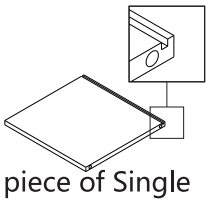


1 piece of Single
groove Top Plate G

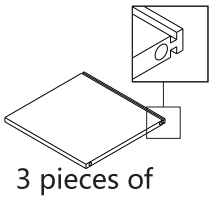


3 pieces of
Double-groove
Shelf H

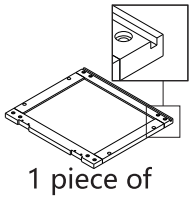


1 piece of
Base Plate I




1 piece of Cloth
Bag Base Plate J

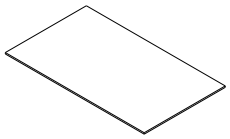

1 piece of
Large Back
Panel K

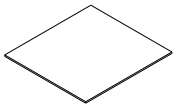

3 pieces of
Small Back
Panel M

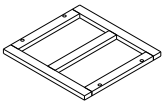

1 piece of
Rectangular
Frame N



4 pieces of
Foot O



1 piece of
Handle P



❶x2



❷x4



❸x1



❹x28


Anti-tip Accessories



❺x10



❻x16

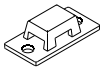

❼x2



❽x1



❾x2




❿x2




⓫x2

1

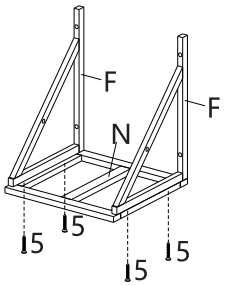


Use No.5 screws to fix tripod F
onto rectangular frame N

2

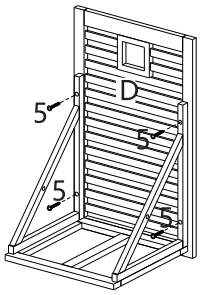


Fix small door D to tripod
F with No.5 screws.

3

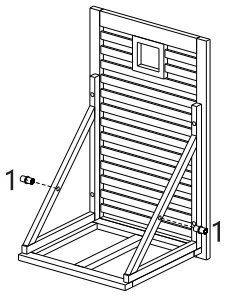


Insert the No.1 iron pin into
the hole of the tripod.

4

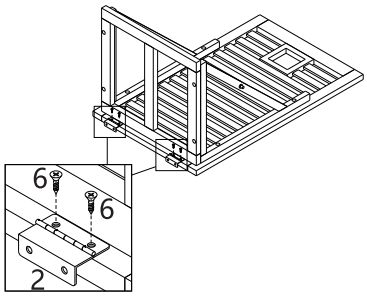


Fix hinge 2 to small door
D with No.6 screws.

5

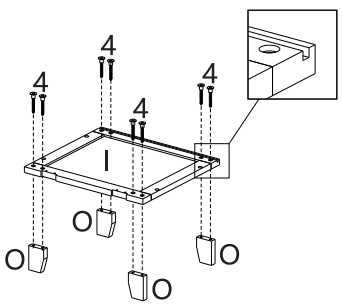


Fix the four feet O to the
base plate I with No.4
screws.

6

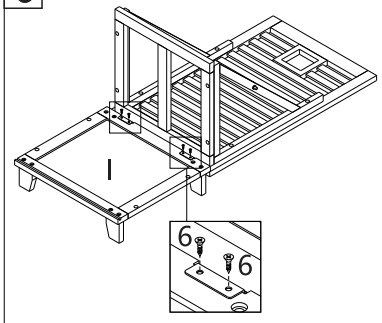


Fix the hinges on the small
door to base plate I with
No.6 screws.

7

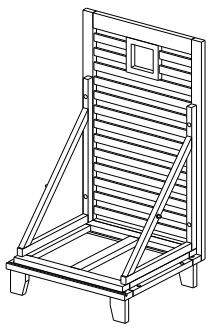


Installation completed.

8

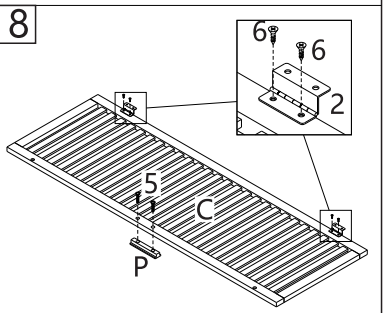

Fix handle P to door C
with No.5 screws.
Fix hinge 2 to door C
with No.6 screws.


9

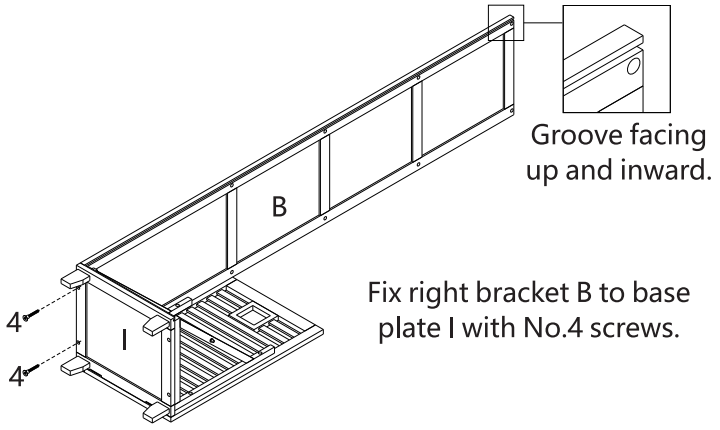

Groove facing up and inward.


Fix right bracket B to base plate I with No.4 screws.

10

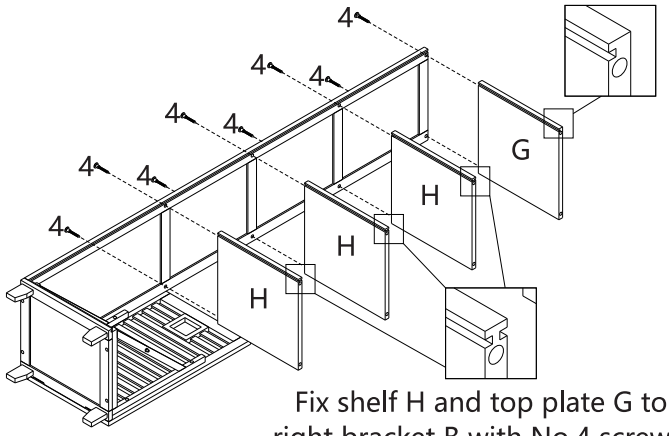


Fix shelf H and top plate G to right bracket B with No.4 screws.

11

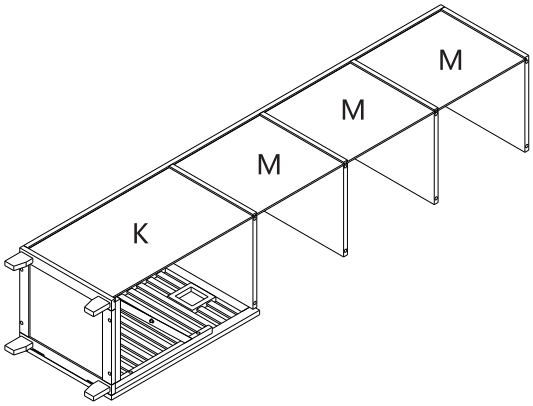


Insert small back panel M and large back panel K into the grooves of the base plate and brackets.

12

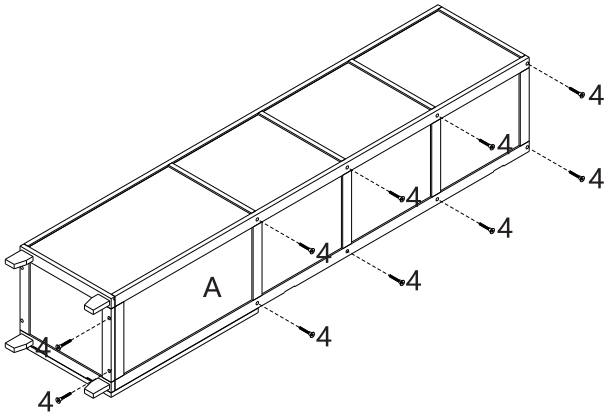


Fix left bracket A with No.4 screws.

13

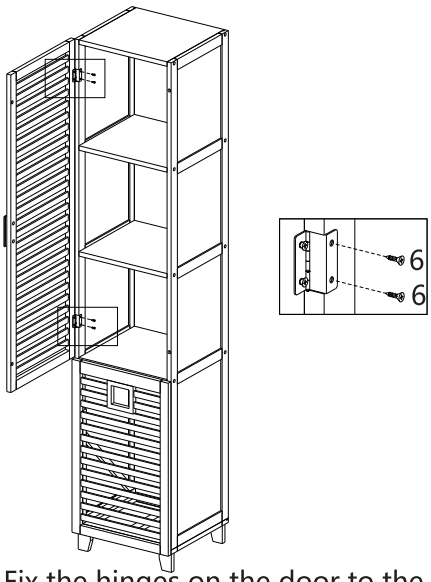


Fix the hinges on the door to the left bracket with No.6 screws.

14

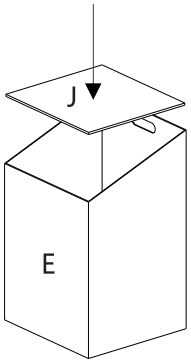


Put the cloth bag base plate J into cloth bag E.

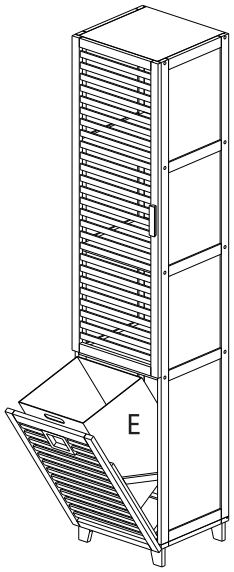


Then put cloth bag E into the cabinet.


15

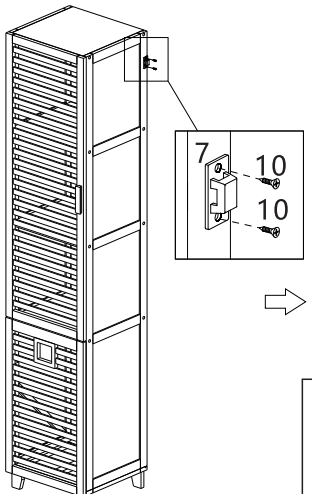


Fix anti-tip device 7 to bracket B with No.10 screws.

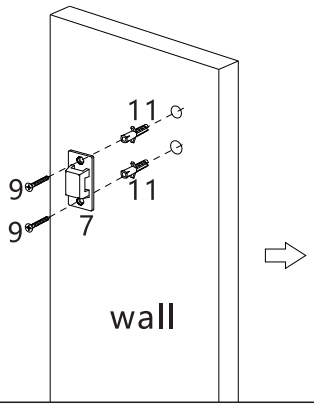

Drill holes in the wall, drive expansion bolts 11 into the holes, then fasten anti-tip device 7 to the wall with No.9 screws.

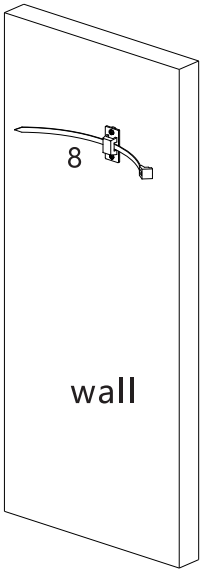

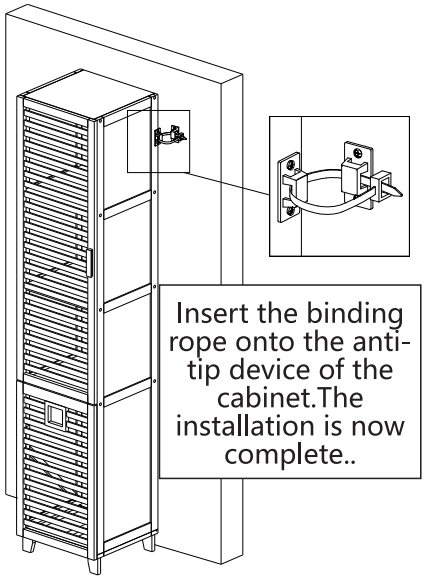

Insert the binding rope onto the anti-tip device of the cabinet.The installation is now complete..