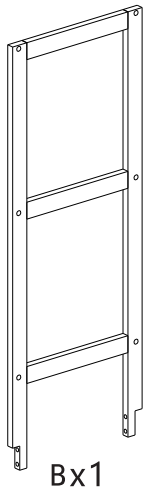
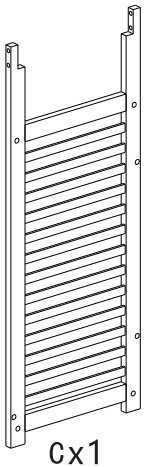
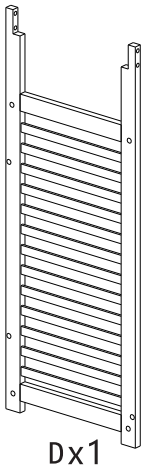
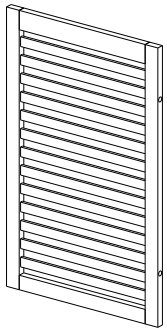
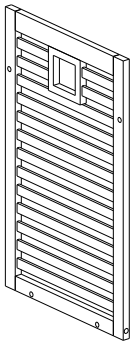

Ax1

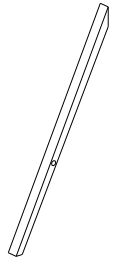

Bx1

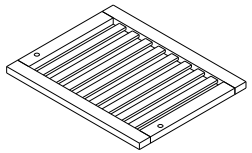

Cx1

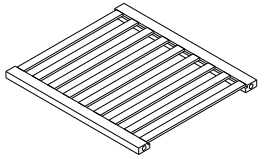

Dx1

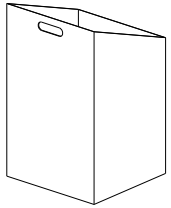

Ex1

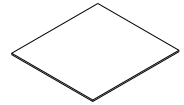

Fx1


Gx2


Hx1


Ix4


Jx1

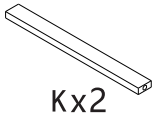

Mx1


❶X24

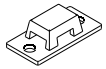

❷X6


❸X8


❹X8


Kx2

anti-tip device


❽x2


❾x1


❿x2


⓫x2

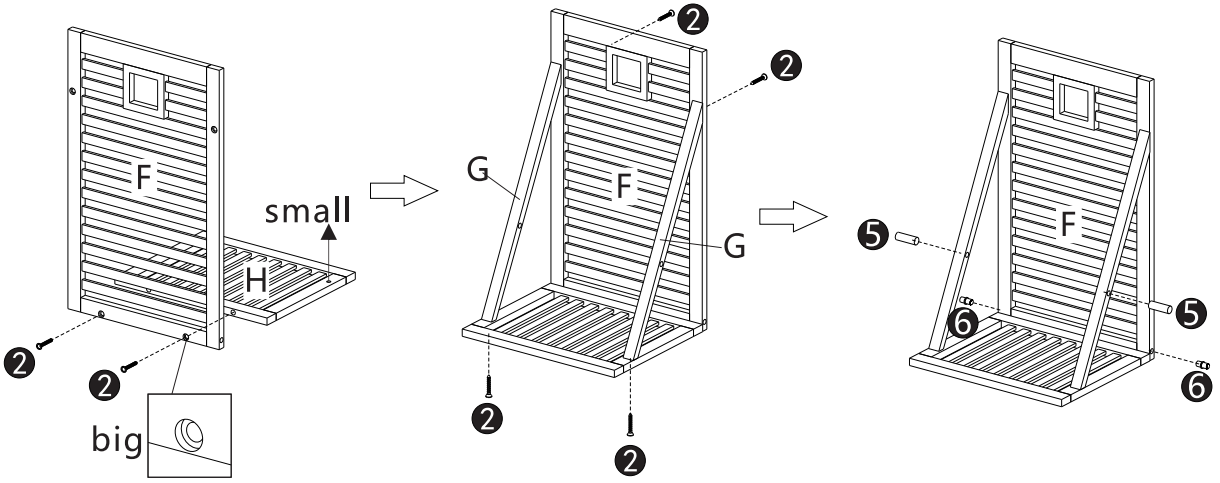

⓬x2


❺X2


❻X2

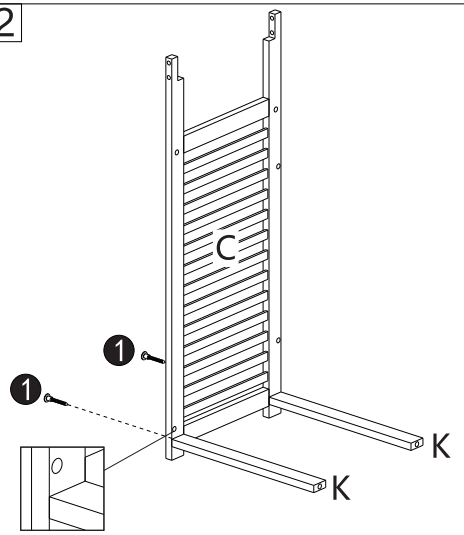

❼X2

1



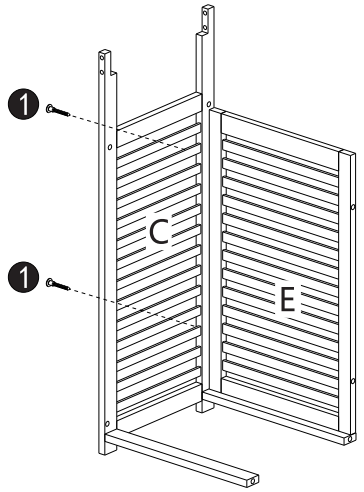
Assemble all door accessories with No. 2 screws.

2



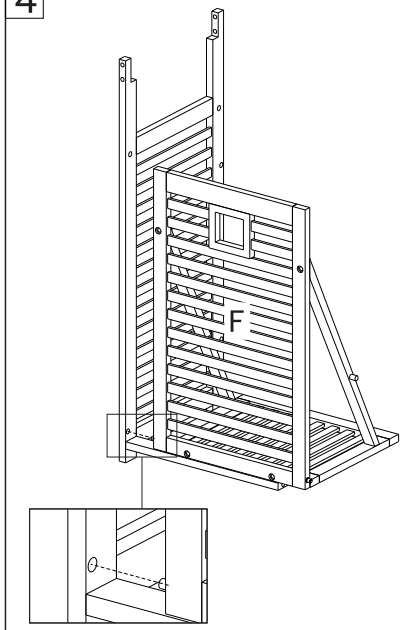
Fix the short stop bar K to the lower left bracket C with No.1 screws.

3



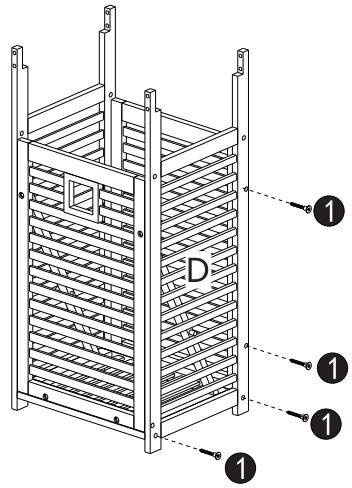
Fix back panel E to bracket C with No.1 screws.

4



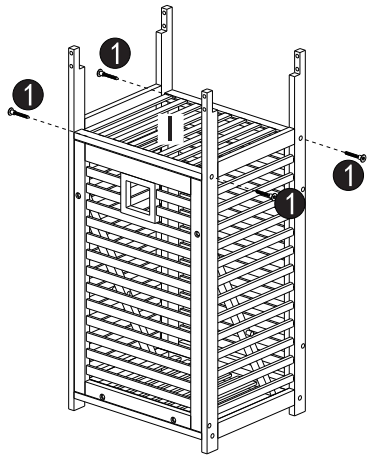
Insert the metal pin on the door into the hole of the bracket.

5



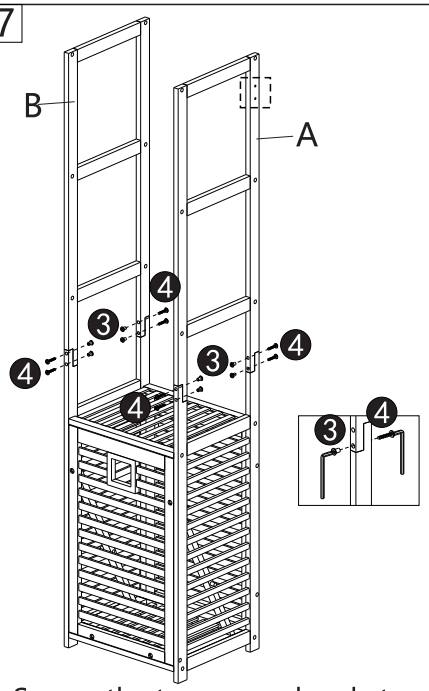
Fix the lower right bracket D with No.1 screws.

6



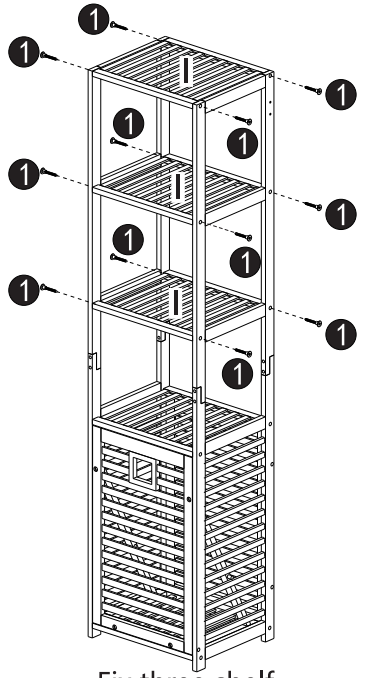
Fix shelf board I with No.1 screws.

7



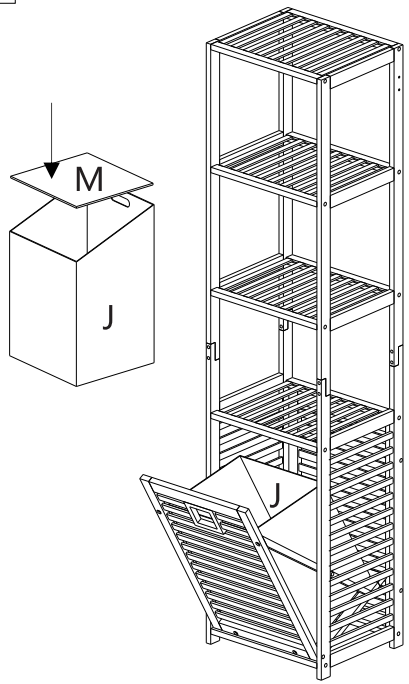
Secure the two upper brackets with No.3 nuts and No.4 screws.

8



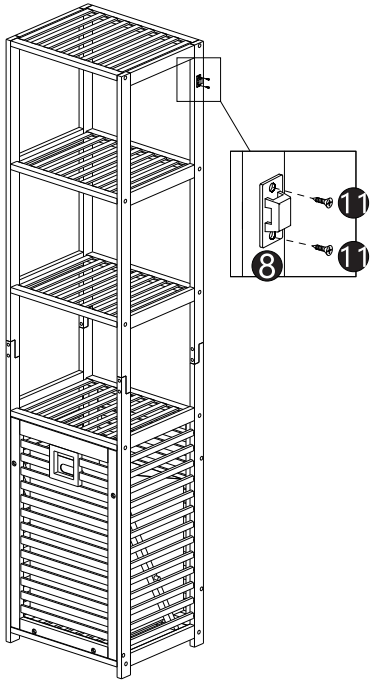
Fix three shelf boards I with No.1 screws.

9



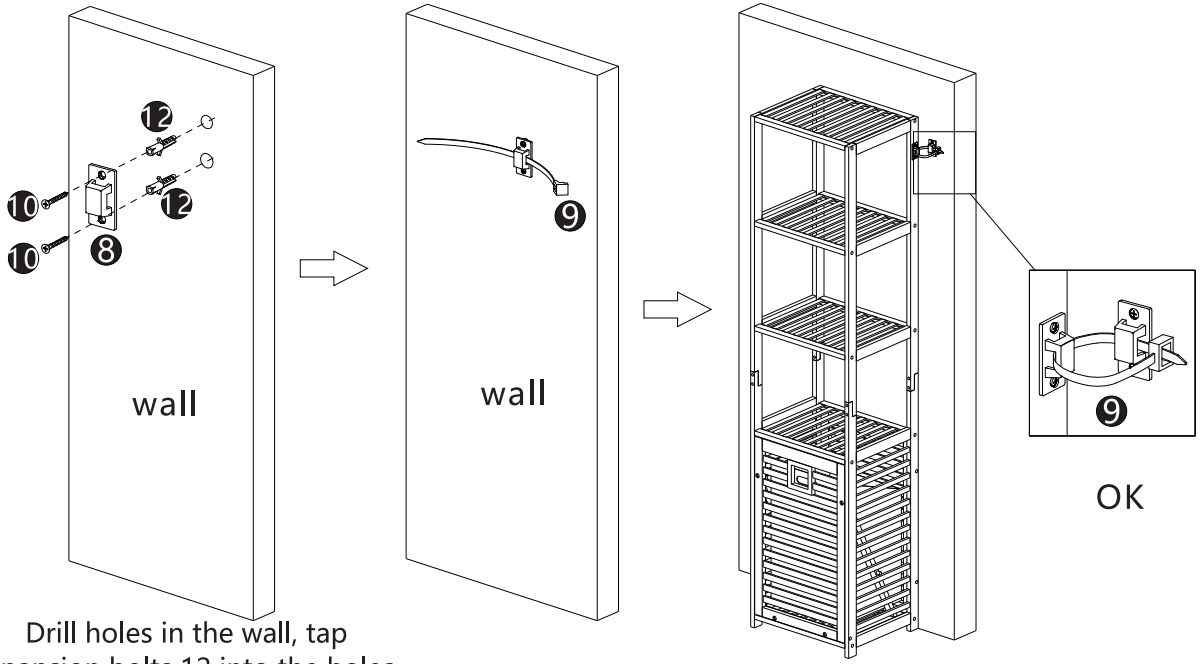
Put on the fabric cover J and the installation is complete.

10



Fix anti-tip device 8 to bracket A with No.11 screws.

11



Drill holes in the wall, tap expansion bolts 12 into the holes, then fasten anti-tip device 8 to the wall with No.10 screws.